



Position	Spare parts	Part number
1	Inverter board	033093060000
2	PC board (Heat&Cool)	033090450400A78s
3	Oval touch controller	034093010301
4	Contactora (3 phase relay)	033990120000
5	Capacitor (3 phase)	041020350000
6	Power filter plate	033090650000
7	Reactor (big)	041301060000
8	Reactor (small)	041301070000
9	Electronic expansion valve	006121100001
10	4-way valve	006110160001
11	Water flow switch	040060620000
12	Fan motor	032051720000
13	Full set of sensors	Z35043000400
14	Compressor	031064030000
15	Titanium heat exchanger (Heat&Cool)	001031250003
16	Evaporator	Z01011730000
17	High pressure protection switch	040050630000
18	Low pressure protection switch	040050130000
19	Low Pressure valve	006080500000
20	Liquid reservoir	006090040000
21	Water union (Black, 50mm)	003990020000
22	Water union gasket	004980050003
23	Fan	007010080000
24	Drainage kit	Z03991700000
25	Top cover	002021741700
26	Front Panel	0020217405Z1
27	Right Up Panel	0020217018Z1
28	Back Panel	0020217406Z1
29	Bottom board	002021740100
30	Back mesh board	0020217403Z1
31	Left mesh board	0020217404Z1