


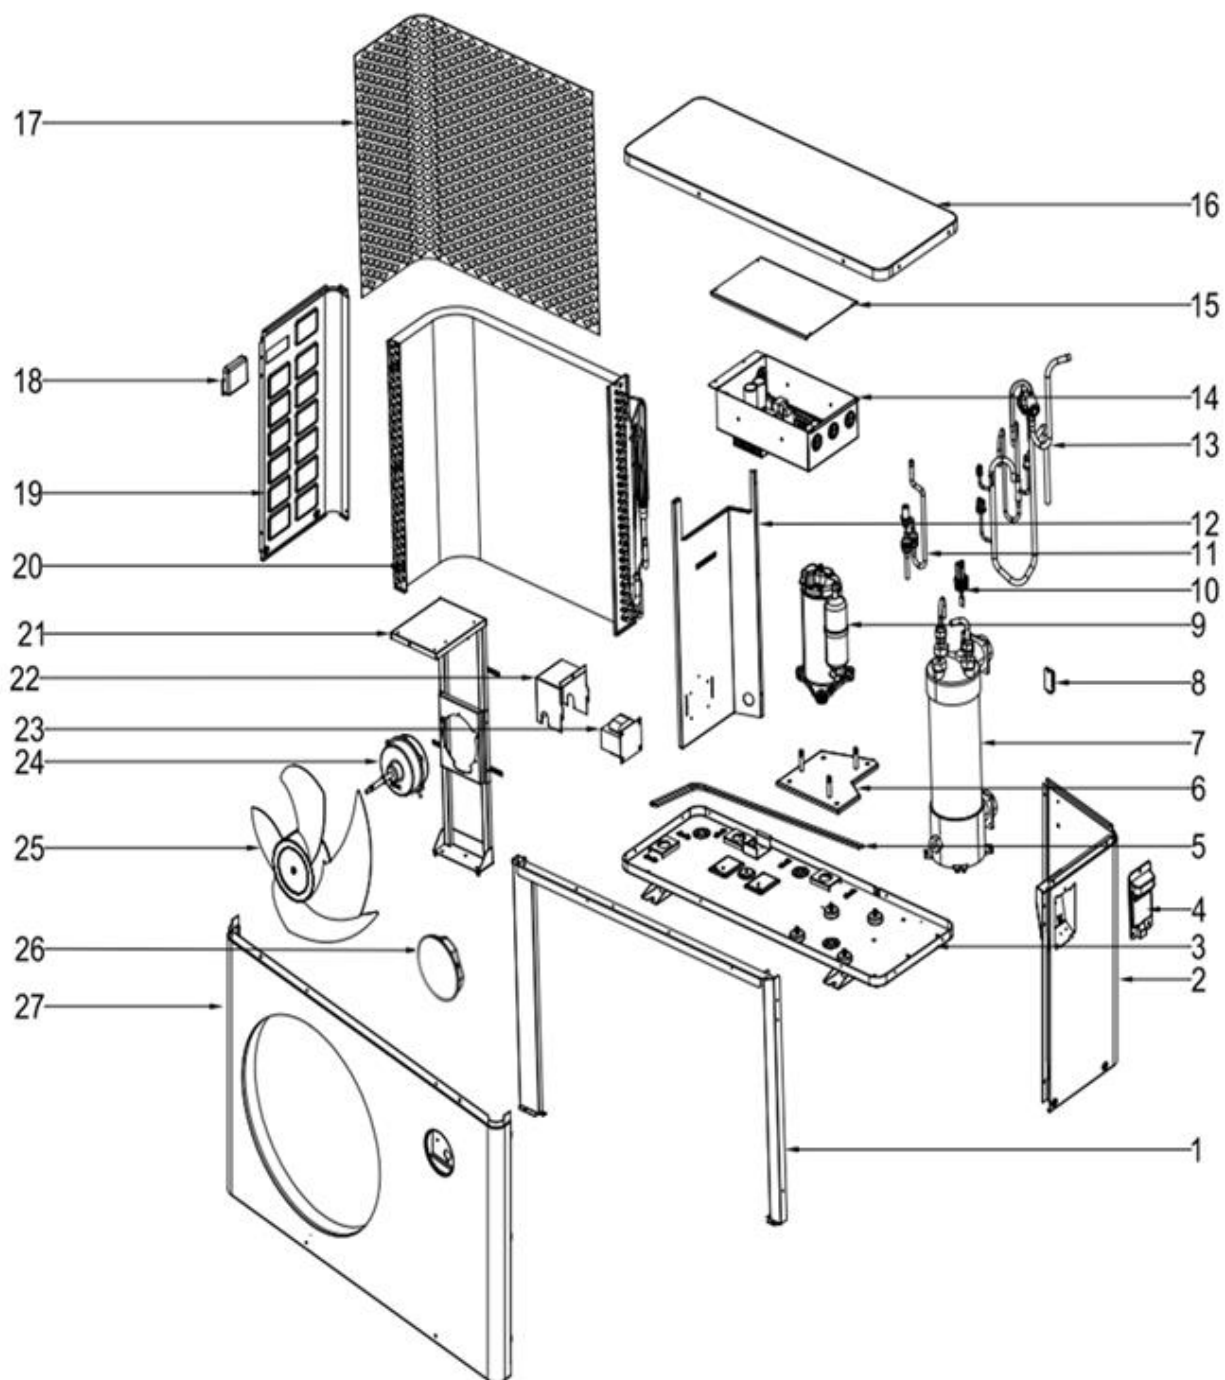

Position	Spare parts	Code
1	Fixed Frame	112-46-10-03918
		112-46-10-03919
		112-46-10-03920
2	Right Plate	112-46-14-00780
3	Chassis	112-00-10-01176
4	Right Handle	107-10002-009
5	Chassis Electric Heater Belt	2100110007
6	Compressor Fixing Plate	112-46-10-03209
7	Titanium Tube Heat Exchanger	110-05-13-00163
8	Sensor Holder	2149000156
9	Compressor	110-00-10-00186
10	Water Flow Switch	113-00-10-00040
11	Throttle Device Assembly	2060040021
		2060110017
12	Middle Partition	112-03-10-00627
13	Four-Way Valve Assembly	110-09-20-00084
		110-09-26-00028
14	Electrical Box	112-04-10-01234
15	Electrical Box Cover	112-04-10-01233
16	Top Cover	112-46-15-00869
17	Back Net	107-10002-202
18	Left Handle	107-10002-006
19	Left Plate	112-46-13-00697
20	Finned Heat Exchanger	110-05-12-00962
21	Motor Support	112-10-10-00389
22	Reactance Cover	112-46-10-02992
23	Reactance	113-02-19-00007
24	Fan Motor	100-10006-214
25	Fan Blade	2030030012
26	Wire Controller	305-00030
27	Front Plate	112-46-11-01213